

1M5 U0-U2 HP VL blue A AM

COMPOSITION

Conveying surface	Material	Polyurethane (TPU) - HP® system			
	Thickness	0.20	mm	0.008	in.
	Surface pattern	VL			
	Colour	HP® blue			
	Coefficient of friction	MF			
Textile carcass	Material	Polyester (PET) - HP® system			
	Plies no.	1			
	Weft type	Rigid			
Driving surface	Material	Fabric polyurethane (TPU) impregn. - HP® system			
	Thickness	---	mm	---	in.
	Surface pattern	Fabric			
	Colour	Light blue			

TECHNICAL SPECIFICATIONS

Total thickness	0.70 mm	0.03 in.
Weight	0.80 kg/m ²	0.16 lbs./sq.ft
Elongation at 1%	5 N/mm	29.0 lbs./in.
Max. admissible pull	5 N/mm	29.0 lbs./in.
Temperature resistance ⁽¹⁾	min. -30 °C	-22 °F
	max. 110 °C	230 °F

⁽¹⁾ Use of the belt with limit values may reduce its life.

Minimum radius / diameter ⁽²⁾

■ Knife edge minimum radius	3 mm	0.12 in.
■ Bending roller min. diameter	6 mm	0.24 in.
■ Counter-bending roller min. diameter	16 mm	0.63 in.

⁽²⁾ The above mentioned values depend on the type of CHIORINO joint recommended.

Coefficient of friction on driving surface

■ Raw steel sheet	0.20 [-]
■ Laminated plastic/wood	0.25 [-]
■ Steel roller	0.20 [-]
■ Rubberized roller	0.30 [-]

Max. production width	2100 mm	83 in.
-----------------------	---------	--------

SUITABLE FOR

Food: slicing machines
Food: dairy
Food: bread
Food: chocolate bars
Food: conveying of dried pasta
Food: pizza
Pharmaceuticals industry
Packaging



PRODUCT SYSTEM



FEATURES

Humidity influence	no
Suitable to metal detector	yes
Permanent antistatic dynamically (UNI EN ISO 21179)	yes
Static conductivity (UNI EN ISO 284)	no
Conveying on skid bed	yes
Conveying on rollers	yes
Conveying on skid bed on top and return	no
Troughed conveying	no
Swan neck conveying	no
Inclined conveying	no
Accumulators belts	no
Curved conveyor	no
Chemical resistances link	12

COMPLIANCES

REACH EC 1907/2006 Regulation and Amendments
EC 1935/2004 Regulation and Amendments
EC 2023/2006 Regulation and Amendments
EU 10/2011, 2023/1442 Regulation and Amendments
HACCP (Hazard Analysis and Critical Control Points)
FDA (Food and Drug Administration)
VEGAN



NOTES

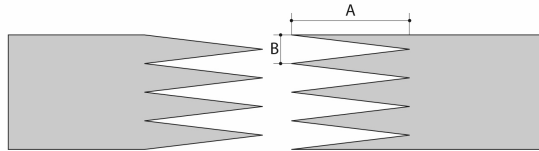
PRODUCT CODE NA1665

Last Update: 25-09-2023

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.

1M5 U0-U2 HP VL blue A AM

Recommended joining procedure
SINGLE Z - 80 x 10 mm


A = 80 mm
B = 10 mm

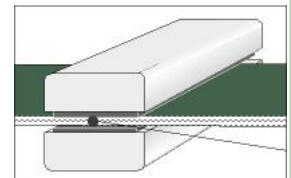
Other joining methods can be used:
DIAGONAL SINGLE Z

Check our general catalogue to get further info on CHIORINO joining methods.

• Pressing
Heating press P \ PL \ PLS

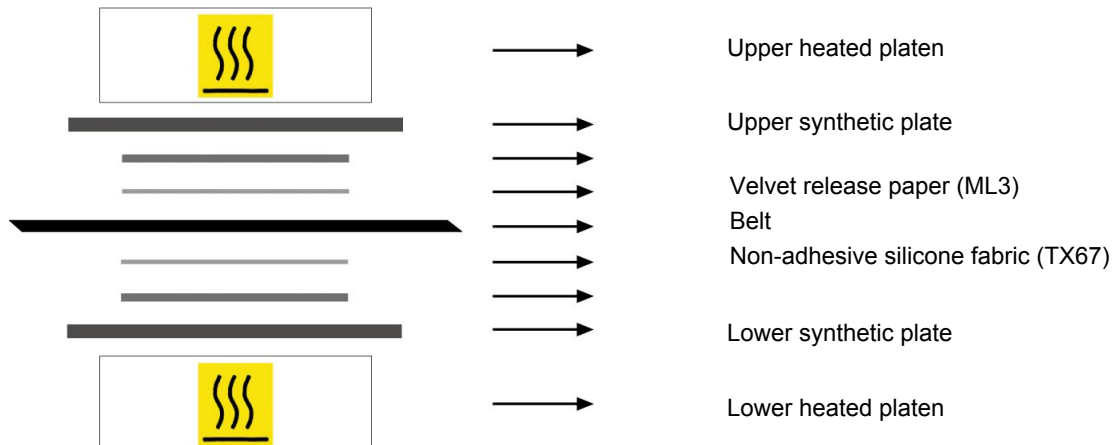
Press settings	
Upper platen temperature	155 °C
Lower platen temperature	155 °C
Temperature gauge setting	155 °C
Curing time in press	2 min.
Pressure	2,5 bar
Film	TC715 - Film PU HP blue AM
Cement	---

1. Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.



2. Allow the cooling cycle to be completed before removing the belt from the press.

3. A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side. A periodical inspection of the thermostats is recommended, to make sure they function correctly.

• Layout of components

• Notes
PRODUCT CODE NA1665
Last Update: 29-07-2022
DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.