

CONVEYOR AND PROCESS BELTS
TECHNICAL DATA SHEET
CODE NA1758
TYPE
EL3-U15 HP PN blue AM
COMPOSITION


Conveying surface	Material	Polyurethane (TPU) - HP® system	
	Thickness	1.40 mm	0.055 in.
	Surface pattern	PN	
	Colour	HP® blue	
	Coefficient of friction	MF	
Textile carcass	Material	---	
	Plies no.	---	
	Weft type	---	
Driving surface	Material	Polyurethane (TPU) - HP® system	
	Thickness	mm	0.000 in.
	Surface pattern	FL	
	Colour	HP® blue	

TECHNICAL SPECIFICATIONS

Total thickness	1.50 mm	0.06 in.
Weight	1.40 kg/m ²	0.29 lbs./sq.ft
Elongation at 8%	3 N/mm	17.0 lbs./in.
Max. admissible pull	3 N/mm	17.0 lbs./in.
Temperature resistance ⁽¹⁾	min.	-30 °C -22 °F
	max.	60 °C 140 °F
⁽¹⁾ Use of the belt with limit values may reduce its life.		
Minimum radius / diameter ⁽²⁾		
■ Knife edge minimum radius	no	
■ Bending roller min. diameter	10 mm	0.39 in.
■ Counter-bending roller min. diameter	15 mm	0.59 in.
⁽²⁾ The above mentioned values depend on the type of CHIORINO joint recommended.		
Coefficient of friction on driving surface		
■ Raw steel sheet	0.40 [-]	
■ Laminated plastic/wood	0.50 [-]	
■ Steel roller	0.40 [-]	
■ Rubberized roller	0.60 [-]	
Max. production width	2000 mm	79 in.

SUITABLE FOR

Food: meat and fish processing
Packaging
Check weighers

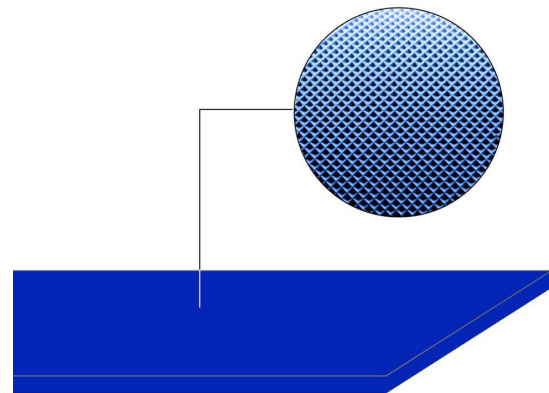
PRODUCT SYSTEM 
FEATURES

Humidity influence	no
Suitable to metal detector	yes
Permanent antistatic dynamically (UNI EN ISO 21179)	no
Static conductivity (UNI EN ISO 284)	no
Conveying on skid bed	yes
Conveying on rollers	yes
Conveying on skid bed on top and return	yes
Troughed conveying	yes
Swan neck conveying	no
Inclined conveying	no
Accumulators belts	no
Curved conveyor	no
Chemical resistances link	12

COMPLIANCES

REACH EC 1907/2006 Regulation and Amendments
EC 1935/2004 Regulation and Amendments
EC 2023/2006 Regulation and Amendments
EU 10/2011, 2017/752 Regulation and Amendments
HACCP (Hazard Analysis and Critical Control Points)
FDA (Food and Drug Administration)


NOTES

Issue: 05-04-2023


Last Update: 11-05-2023

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.

CODE **NA1758** TYPE **EL3-U15 HP PN blue AM**

Recommended joining procedure **SINGLE Z - 50 x 20 mm**

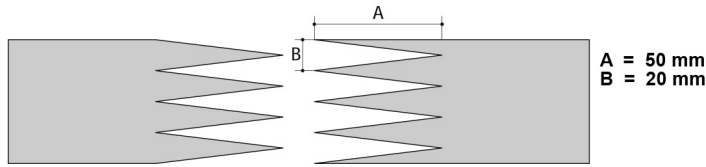

Other joining methods can be used:
SINGLE Z - 80 x 10 mm


Check our general catalogue to get further info on CHIORINO joining methods.

• Pressing

Heating press **P \ PL \ PLS**


Press settings	
Upper platen temperature	155 °C
Lower platen temperature	155 °C
Temperature gauge setting	155 °C
Curing time in press	3 min.
Pressure	2,5 bar
Film	none
Cement	---

1. Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.

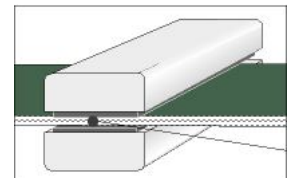

2. Allow the cooling cycle to be completed before removing the belt from the press.
3. A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side. A periodical inspection of the thermostats is recommended, to make sure they function correctly.

• Layout of components

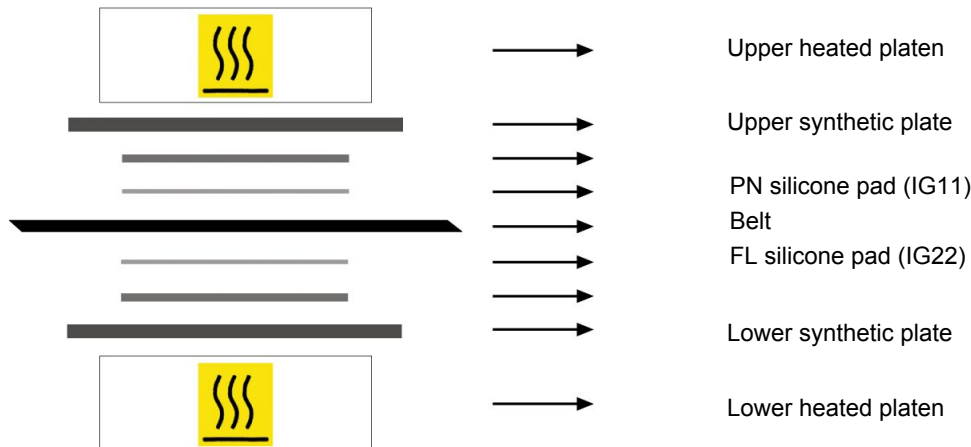

• Notes

Issued: 21-04-2023

Last Update: 17-05-2023

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.