


CONVEYOR AND PROCESS BELTS

TECHNICAL DATA SHEET

CODE	NA30	TYPE	2M8 U0-V5 A
------	------	------	-------------

COMPOSITION

Conveying surface	Material	PVC 65 Sh.A (±5)		
	Thickness	0.50 mm	0.020 in.	
	Surface pattern	Smooth		
	Colour	Green		
	Coefficient of friction	MF		
Textile carcass	Material	Polyester (PET)		
	Plies no.	2		
	Weft type	Rigid		
Driving surface	Material	Fabric with polyurethane (TPU) impregnation		
	Thickness	---	mm	---
	Surface pattern	Fabric		
	Colour	Grey		

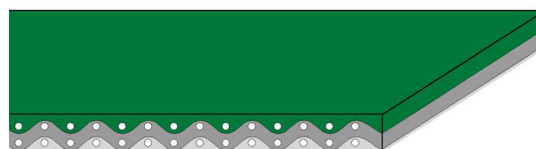

TECHNICAL SPECIFICATIONS

Total thickness	2.00 mm	0.08 in.	
Weight	2.30 kg/m ²	0.47 lbs./sq.ft	
Elongation at 1%	8 N/mm	46.0 lbs./in.	
Max. admissible pull	16 N/mm	91.0 lbs./in.	
Temperature resistance ⁽¹⁾	min.	-10 °C	14 °F
	max.	60 °C	140 °F

⁽¹⁾ Use of the belt with limit values may reduce its life.

Minimum radius / diameter ⁽²⁾		
■ Knife edge minimum radius	no	
■ Bending roller min. diameter	30 mm	1.18 in.
■ Counter-bending roller min. diameter	40 mm	1.57 in.

⁽²⁾ The above mentioned values depend on the type of CHIORINO joint recommended.

Coefficient of friction on driving surface	
■ Raw steel sheet	0.20 [-]
■ Laminated plastic/wood	0.25 [-]
■ Steel roller	0.20 [-]
■ Rubberized roller	0.30 [-]

Max. production width	3500 mm	138 in.
-----------------------	---------	---------

SUITABLE FOR

Textile: inspecting machines
 Wood industry
 Packaging
 Materials handling
 Mechanical industry
 Corrugated cardboard

FEATURES

Humidity influence	no
Suitable to metal detector	yes
Permanent antistatic dynamically (UNI EN ISO 21179)	yes
Static conductivity (UNI EN ISO 284)	no
Conveying on skid bed	yes
Conveying on rollers	yes
Conveying on skid bed on top and return	no
Troughed conveying	no
Swan neck conveying	no
Inclined conveying	no
Accumulators belts	no
Curved conveyor	no
Chemical resistances link	3

COMPLIANCES

REACH EC 1907/2006 Regulation and Amendments
 EC 1935/2004 Regulation and Amendments
 EC 2023/2006 Regulation and Amendments
 EU 10/2011, 2023/1442 Regulation and Amendments
 FDA (Food and Drug Administration)



NOTES

Issue: 24-07-2009

Last Update: 24-06-2024

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.

CODE **NA30** TYPE **2M8 U0-V5 A**

Recommended joining procedure **SINGLE Z - 80 x 10 mm**



Other joining methods can be used:

- DIAGONAL SINGLE Z
- DOUBLE Z
- SKIVED JOINT '2'

Check our general catalogue to get further info on CHIORINO joining methods.

• Pressing

Heating press **P \ PL \ PLS**


Press settings	
Upper platen temperature	165 °C
Lower platen temperature	165 °C
Temperature gauge setting	165 °C
Curing time in press	3 min.
Pressure	3 bar
Film	TC29 - Green PVC film
Cement	---

1. Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.



2. Allow the cooling cycle to be completed before removing the belt from the press.
3. A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side. A periodical inspection of the thermostats is recommended, to make sure they function correctly.

• Layout of components

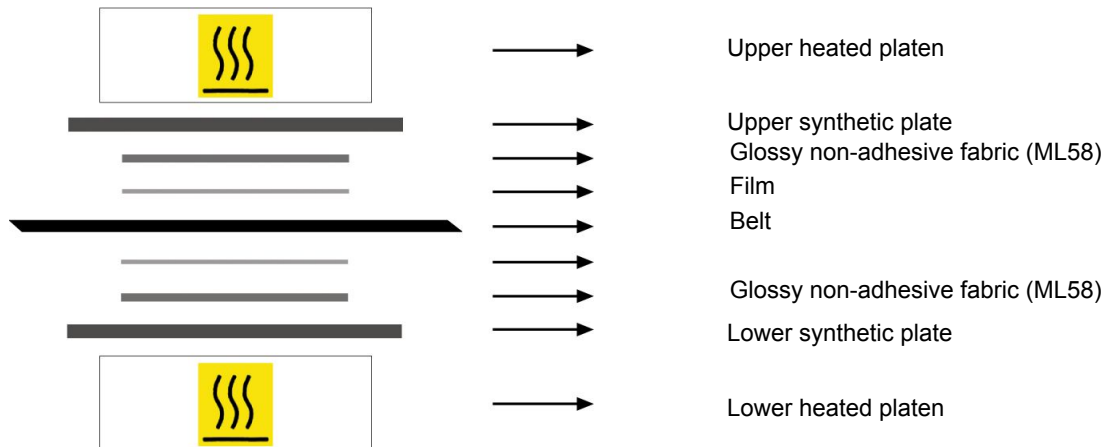

• Notes

Issued: 31-10-2013

Last Update: 23-11-2018

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.